


TK HIRE

Operating and safety instructions for Airless sprayer



SAFETY FIRST: If you are collecting the equipment for someone else please make sure this sheet is given to the equipment user to read. In accordance with Health and Safety in Employment Act requirements, this sheet should be given to the site supervisor if the equipment is being hired for use at a commercial worksite so that the information is available to all users.

Required Safety Equipment

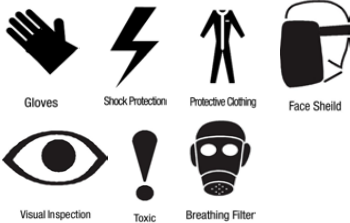

Pre Start Checks and Safety

- ! Ensure the machine has a current Electrical Code of Compliance
- ! Check machine is clean external and internal
- ! Ensure good clean filters are fitted in the gun and suction line
- ! Check unit is complete with hose, gun, suction filter, correct tip size for job
- ! Check Pump oil levels
- ! Never pull the trigger or point the gun toward people
- ! Unlock the trigger only when spraying
- ! Never use a damaged hose
- ! Do not raise the pressure unnecessarily
- ! Connect all attachments properly
- ! Wear suitable overclothes and footwear
- ! Wear painting masks/glasses/gloves
- ! Take extra caution when working with high Air Pressure
- ! Don't paint in a confined area
- ! Avoid breathing in solvents etc

When Operating

Turn pressure regulating knob slowly clockwise
When material is being returned to the can via the return hose and no bubbles appear then the pump is primed
Turn the relief valve clockwise slowly to its limit and wait for the hose to fill with

material, the pressure gauge (on some models) indicates approx 3000psi and adjust pressure to suit material
Note: If tip clogs, rotate tip handle 180° until hole side of handle is pointed in spray direction trigger gun and line pressure will remove clog, rotate tip to spray position

Starting procedure

Check that unit is switched off
Plug transformer or a residual current device (RCD) unit into power supply
Plug extension lead (do not exceed 15 metres extension cord) into transformer or RCD and Airless Sprayer unit
Turn pressure regulating and relief valves anti clockwise to their limit
Insert suction and return hoses into material to be sprayed
Switch on motor

Stopping and After Use

Turn pressure regulating and relief valves anti clockwise to their limit
Cleaning is important
Flush unit thoroughly with clean water for 10 15 minutes after each use with gun removed then gun fitted
Adjust fluid pressure to lowest possible setting and set trigger safety lock
Switch off pump and disconnect power
Release fluid pressure
Clean up all equipment while still wet